



# Nokia 8260 Microphone Replacement

Written By: Aaron Jen



## INTRODUCTION

How to remove the microphone.

---



### TOOLS:

- [Spudger](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Battery



- Turn off the cell phone.

## Step 2



- Press down on the round button on the back cover of the phone.



### Step 3



- Slide the back cover down while still pressing the button.

### Step 4



- Remove the back cover.



## Step 5



- Press the end of the battery towards the top of the phone.

## Step 6



- Lift the battery outwards while still pressing it upwards till it pops out.
- ⓘ You may need to take several attempts to lift out the battery.

## Step 7 — Antenna



- Squeeze the flat end of the spudger into the crack right under the word "Nokia" on the back of the phone.
- ⓘ This step may be a bit difficult if you are removing the antenna for the first time.

## Step 8



- Pry open the antenna door by pulling down the top of the spudger



## Step 9



- Remove the antenna door.

## Step 10



- If the gold antenna remained stuck to the door, you have finished removing the antenna from the phone.
  - If the gold antenna is still in the phone, carefully remove it and stick it onto the back of the door.
- ⚠ Try to keep the antenna as flat as possible. Do not bend it.



## Step 11 — Circuit Board



- Remove the five screws with the Torx Screwdriver: two near the bottom, two in the middle, and one under the antenna door.

**i** The two bottom screws are longer than the upper three.

## Step 12



- Remove the back covering.

## Step 13



- Remove the two screws at the top.


## Step 14



- Remove the metal plating and the circuit board.
- ⚠ There is nothing holding the rest of the phone together. Handle the rest of the phone carefully.
- ⓘ The LCD will be attached to the circuit board.



## Step 15 — Keypad

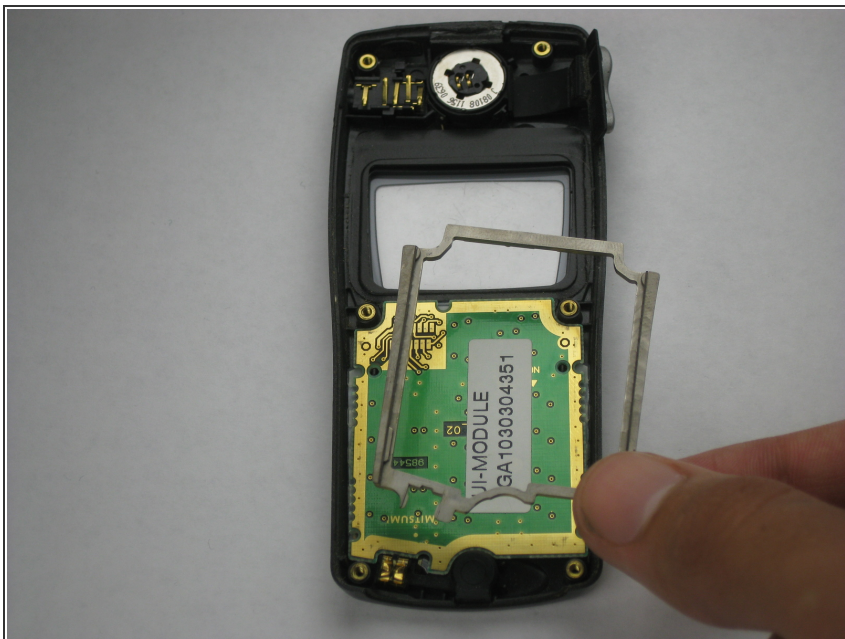

- Remove the plastic border lying on the keypad.

## Step 16



- Remove the keypad.
- ⓘ Depending on what you are doing, you can take out or leave the buttons to the keypad in the front casing.



## Step 17 — Microphone



- Remove the microphone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 06:15:14 PM.